

Remote control programming

1) Initial Programming

- Select channel number for shutter if using multi /channel remote
- For new motor programming
- Press and hold up button for three seconds or one flash two quick flash and one steady flash of led
- Turn on / or connect power / do not release up button. Motor will jog when it does release up button and repress once motor will jog program complete.

2) Change Direction

- To change direction of travel ie up and down press and hold stop button until motor jogs then press down button.

3) Delete Program

- To delete programming remove back cover to remote / Slide down from top
- Press and hold stop button until motor jogs then press the small red button in back of remote motor jogs program deleted

4) Adding extra remotes

- To add other remotes select corresponding channel on both remotes
- Press and hold stop button on the remote already programmed to motor until it jogs then press up button on remote to be added motor jogs program complete.

5) Inch mode

- If motor only goes when you press the button
- Press and hold stop button until motor jogs then press stop button again motor will now continuous travel.

Note:

- Power must be turned on or connected for each motor separately.
- Do not use main switch or all motors will program together. Do not try to use the master channel to program.